
Desktop HD Video Camera User Manual

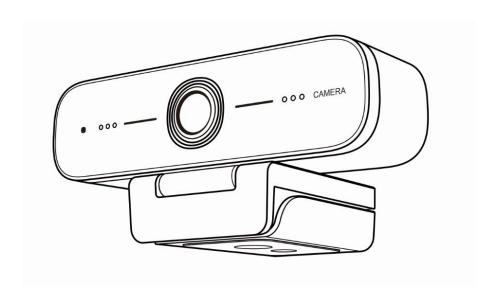



This manual introduces functions, installations and operations for this camera in details. Please read this manual carefully before installation and use.

1. Cautions

- 1.1 Avoid damage to product caused by heavy pressure, strong vibration or immersion during transportation, storage and installation.
- 1.2 Housing of this product is made of organic materials. Do not expose it to any liquid, gas or solids which may corrode the shell.
- 1.3 Do not expose the product to rain or moisture.
- 1.4 To prevent the risk of electric shock, do not open the case. Installation and maintenance should only be carried out by qualified technicians.
- 1.5 Do not use the product beyond the specified temperature, humidity or power supply specifications.
- 1.6 Wipe it with a soft, dry cloth when cleaning the camera lens. Wipe it gently with a mild detergent if needed. Do not use strong or corrosive detergents to avoid scratching the lens and affecting the image.
- 1.7 This product contains no parts which can be maintained by users themselves. Any damage caused by dismantling the product by user without permission is not covered by warranty.

2. Electrical Safety

Installation and use of this product must strictly comply with local electrical safety standards.

3. Install

- 3.1 Do not rotate the camera head violently, otherwise it may cause mechanical failure;
- 3.2 This product should be placed on a stable desktop or other horizontal surface. Do not install the product obliquely, otherwise it may display inclined image.
- 3.3 Ensure there are no obstacles within rotation range of the holder.
- 3.4 Do not power on before completely installation.

4. Magnetic Interference

Electromagnetic fields at specific frequencies may affect the video image. This product is Class A. It may cause radio interference in household application. Appropriate measure is required.

Content

1.	Camera Installation	. 3
	1.1 Product Interfaces	. 3
	1.2 Usage of the Product	. 3
	Product Introduction	
	2.1 Dimension	. 4
	2.2 Main Features	. 4
	2.3 Technical Parameter	. 5
3.	Maintenance and Troubleshooting	. 6
	3.1 Camera Maintenance	
	3.2 Troubleshooting	. 6

1. Camera Installation

1.1 Product Interfaces

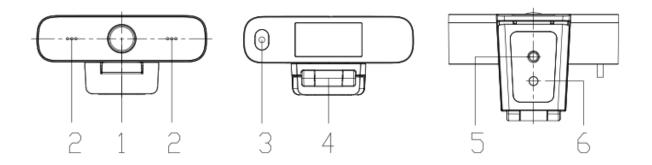


Figure 1.1 Interfaces Instructions

1. Camera Lens(fixed)	3. USB2.0 Cable Outlet Hole(no plug)	5.Screw Hole for Tripod
2. Audio IN(built in pick-up)	4.Fixation Clamp	6.Screw Hole for Bracket

The USB 2.0 port available for plug and play, and it can output video and power the camera.

1.2 Usage of the Product

- 1) Product installation: Fix the device on the top of LCD screen or laptop or directly on the desktop and tripod.
- 2) Camera USB cable connect with computer, video conference terminal or other USB input device.
- 3) Open the video software, select the video device to get video output.

2. Product Introduction

2.1 Dimension

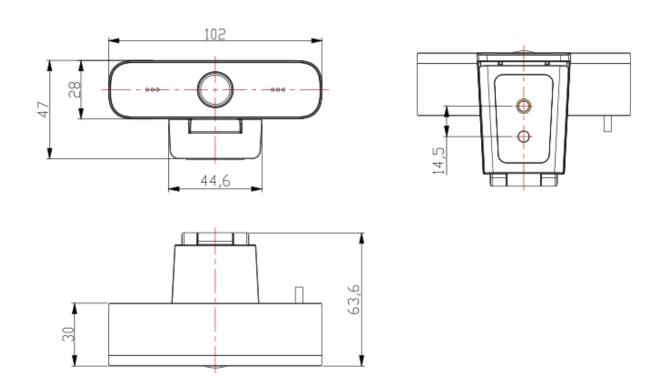


Figure 2.1 Product Dimension

Please check and confirm all accessories are provided when opening the package: User Manual x $\bf 1$

2.2 Main Features

MG104 offers perfect functions and superior performance; Featuring with advanced ISP processing algorithms, offering vivid and high resolution video with a strong sense of depth and fantastic color rendition. Easy and convenient to install and maintain, stable and reliable.

Product Advantages

- FHD: High quality sensor. Resolution is up to 1920x1080 with frame rate up to 30fps.
- Multiple installation: Free to choose installation place, the device is with fix clamp which enable it to be installed on LCD screen, the top of laptop or directly on desk and tripod.
- Wide Application: Personal Video Platform, Videoconferencing, Cooperative Office etc.

• Convenient application: No need to download driver or extra software, it is convenient and easy for users.

Product Features

- USB2.0 Interface: Easy plug and play, power and upgrade support;
- Multiple Lens Optional: 80° horizontal viewing angle without distortion lens and 109° super wide-angle lens
- Stereo sound: built-in pickup, clear and natural stereo sound effect, no need for external pickup equipment;
- Multiple video encoding: support H.264 \(\times \) H.265 \(\times \) MJPEG \(\times \) YUY2 video encoding, making video playback smoother;

2.3 Technical Parameter

Model	MG104-1	MG104-2
Sensor	high quality CMOS sensor	
Effective Pixels	2.07MP, 16:9	
Video Format		os;960x540@30fps/25fps;800x600@30fps/25fps; 40x360@30fps/25fps;320x240@30fps/25fps;320
View Angle	88° (D) /80° (H) /50° (V)	113° (D) /109° (H) /57° (V)
Focal Length	3.24mm	2.90mm
Digital Zoom	Support	
Minimum Illumination	0.5Lux(F1.8, AGC ON)	
Focus	Manual	
AF	Fixed	
Backlight Contrast	On/Off	
Exposure	Exposure parameters can be adjusted, support a	auto exposure
Video Adjustment	Brightness, Definition, Saturation, Contrast, brightness compensation etc.	White Balance Mode, Gain, Anti-flicker, Low
SNR	>50dB	

Input/output Interface	ut/output Interface		
Video Interfaces	USB2.0(support power supply and upgrade)		
Video Compression Format	MJPEG、YUY2、H.264、H.265		
	Duils to high appaint a value wishing		
Audio Input	Built in high sensitive voice pickup		

Other Parameter	
Input Voltage	5V
Input Current	500mA (Max.)
Power Consumption	2.5W(Max.)
Stored Temperature	-10°C ~ +60°C
Stored Humidity	20% ~ 95%
Working Temperature	-10°C ~ +50°C
Working Humidity	20% ~ 80%
Dimension(WXHXD)	102mm*47mm*30mm
Weight	0.15kg
Working Environment	Indoor
Accessory	User Manual

3. Maintenance and Troubleshooting

3.1 Camera Maintenance

- 1) Please power off the camera and disconnect the power adapter and socket, if it's not used for a long run.
- 2) Use soft cloth or tissue to clean the camera cover.
- 3) Wipe it with a soft, dry cloth when cleaning the camera lens. Wipe it gently with a mild detergent if needed.

 Do not use strong or corrosive detergents to avoid scratching the lens and affecting the video quality.

3.2 Troubleshooting

1)No video output

- a. Check whether the camera USB cable is connected, USB port is normal, the power indicator is lit.
- b. Please disconnect the camera with computer and re-connect by USB to check if it works.
- c. Please check whether the video software selects the correct device

2) No image sometimes

- a. Check whether the camera USB cable is connected, USB port is normal, the power indicator is lit.
- b. Please disconnect the camera with computer and re-connect by USB to check if it works.